


# INSTALLATION MANUAL

Default configuration in brackets:

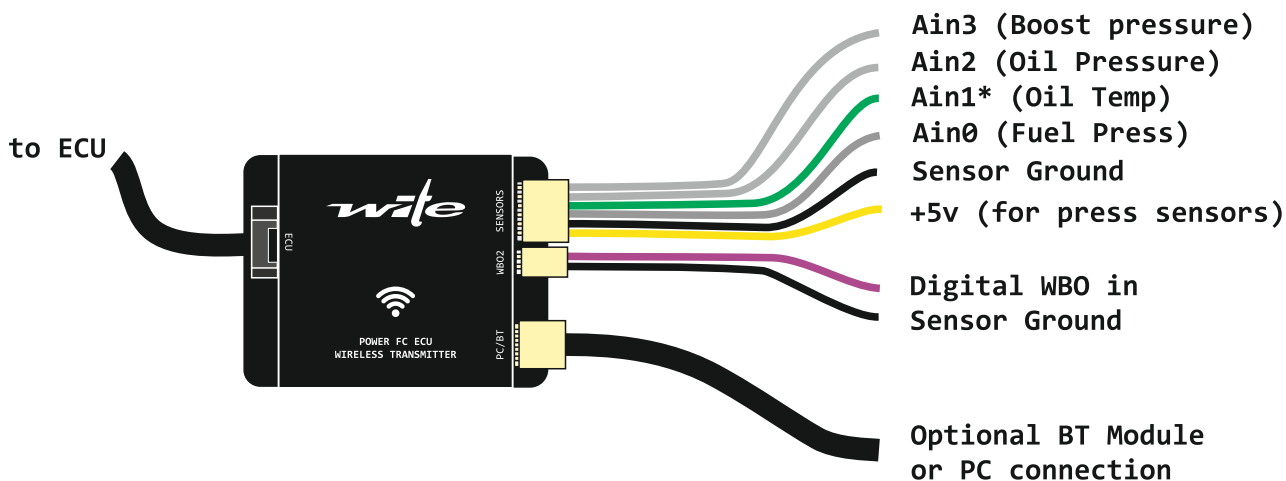

\*2.2k pull up to 5v

## Sample wiring diagram

